

CONSTRUCTION PLAN

 
Integration into your company LAN network (optional)

2



The Cellair Controller registers in your network under the name **„cellaircc“**

1 Connect your CellAir Controller with the **left (= DHCP Client)** LAN port to your Company LAN-Network




2 Locate the Cellair Controller with the designation "cellaircc" in your network and assign it a fixed IP address.

3 Open your browser (e.g. Chrome, Firefox, MS Edge, Safari, etc.), enter "http://**your.fixed.IP-Adress**" in the address bar and set a bookmark.

DHCP-CLIENT LAN 1

Setup of an internal LAN network

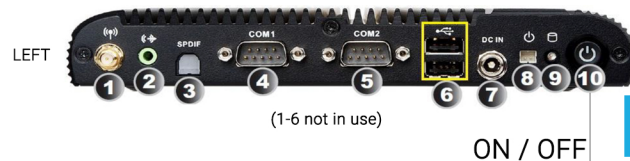

CellAir Controller

Connect your CellAir Controller with the **right** LAN port



DHCP-SERVER **DO NOT** connect to your home/company network!

LAN 2

PC / MAC

Connect your Computer to the LAN switch.



Ethernet LAN RJ45



1 Connect every Hypoxicator with your LAN-Switch



CELLAIR Hypoxicator

4 Open your browser (e.g. Chrome, Firefox, etc.) and enter "http://**192.168.3.1**" in the address line.

IP: 192.168.3.1

1